


# BASIC OPERATING INSTRUCTIONS FOR THE TAKTIS FIRE ALARM CONTROL PANEL

Frame these instructions and mount on the wall next to the control panel.

## FIRE SYSTEM NORMAL CONDITION

Only the GREEN AC POWER ON indicator is illuminated. All other LEDs are off.

The event tabs will numerically indicate active events on the panel; the event type with the highest active event priority will automatically be displayed. Any event type can be accessed by pressing the associated tab.

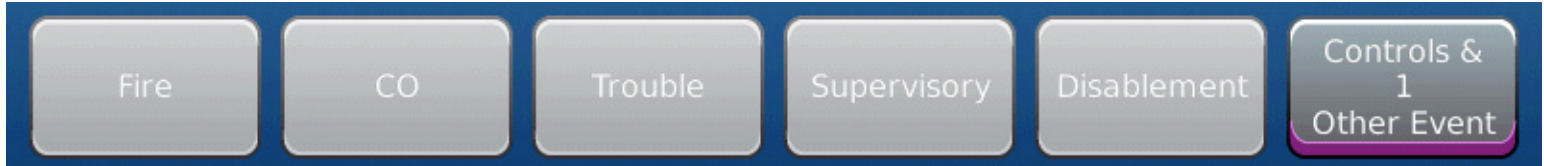

## IN THE EVENT OF A FIRE

- the Fire indicator on the panel flashes red
- the applicable indicator on the Zone LED Board flashes (if connected)
- the panel GUI displays details about the Fire event
- fire warning notification appliances activate as programmed
- outputs programmed to operate in the event of a fire will activate
- the panel buzzer activates

## IN THE EVENT OF A CO ALARM

- the CO Alarm indicator on the panel illuminates yellow
- the applicable indicator on the Zone LED Board flashes (if connected)
- the panel GUI displays details about the CO Alarm
- CO warning notification appliances activate as programmed
- the panel buzzer activates

For both fire and CO alarms, take the following actions:

1. **Evacuate the area.**
2. **Notify the proper authorities immediately and state the nature and location of the emergency.**
3. **Be prepared to provide directions to firefighters.**

## WITH ACCESS LEVEL 2 OR HIGHER, THE FOLLOWING FUNCTIONS ARE AVAILABLE

Silence Alarms Press **Activate Controls > Silence Alarms** to silence notifications. Notifications can be reactivated by pressing **Re-Sound Alarm**.

Buzzer Silence Press **Buzzer Silence** to silence the panel buzzer.

Reset System Press **Reset System**.

**WARNING!** Alarm notification signals should not be silenced until all occupants have been evacuated.

### Lamp & Buzzer Test

This test confirms operation of the indicator lamps and the buzzer. To perform the Lamp & Buzzer Test:

1. Press the panel GUI during the Fire System Normal condition.
2. Press **Panel Tests > Lamp & Buzzer Test**. The internal buzzer of the fire control panel sounds and all indicator lamps light for 5 seconds. Contact Technical Support if fascia lamps do not light.

### Display Test

This test confirms operation of the panel GUI.

1. Press the panel GUI during the Fire System Normal condition.
2. Press **Panel Tests > Display Test**. A confirmation window will appear.
3. Press **Continue** to test the display. The panel GUI cycles through a series of blank raster colors.

**FOR ADDITIONAL INFORMATION, REFER TO THE TAKTIS FIRE ALARM CONTROL PANEL INSTALLATION GUIDE.**

## IN THE EVENT OF A TROUBLE

**WARNING!** Trouble conditions may affect the panel's ability to provide early detection and indication of a fire. Contact Authorized Service Personnel to clear trouble conditions immediately.

- the General Trouble indicator on the panel flashes yellow. There may be other LED indications which identify the nature of the trouble.
- outputs programmed to operate in the event of a trouble will activate
- the panel GUI displays details about the Trouble
- the panel buzzer activates

Troubles will typically reset automatically once the condition has cleared.

## IN THE EVENT OF A SUPERVISORY

- the Supervisory Alarm indicator on the panel illuminates yellow
- panel outputs programmed to operate in the case of a Supervisory event will activate
- the panel buzzer activates
- the panel GUI displays details about the Supervisory Alarm

Supervisory Alarms will typically reset automatically once the condition has cleared (device may be programmed latching or non-latching).

### ACCESS LEVEL KEY

The key to access user level 2 can be found at the following location:

### PANEL KEY

The key to access internal panel components can be found at the following location:

### FOR SERVICE, CONTACT:

Company: \_\_\_\_\_

Address: \_\_\_\_\_

Phone: \_\_\_\_\_